

General assembly and installation manual for biminipops



Step 1:

Mount the lateral brackets which are packed in a separate box to the arches. The rear tube indicated by the arrow in the photo is attached to the rear arch. You can recognize the back arch by the label sewn on the fabric. The other tubes speak for themselves.



Before sliding the tubes together, first slide the plastic sleeve over the tube and then screw it tight.




If you have ordered support poles, you must first detach the center section indicated by the blue arrow from the support posts. You slide the middle piece over the rear tube indicated by the gray arrow in the first photo.


Step 2:

Depending on the chosen bimini top, you have tensioning lines or straps.

If you have tension lines, cut the tension line / rope into 4 equal pieces. Make a loop on 1 side and attach it to the opening in the fabric at the bimini top. On the other side, mount the plate to the rope with a knot. The system works like a guy line. If you have luxury straps, then mount the straps to the opening in the fabric.

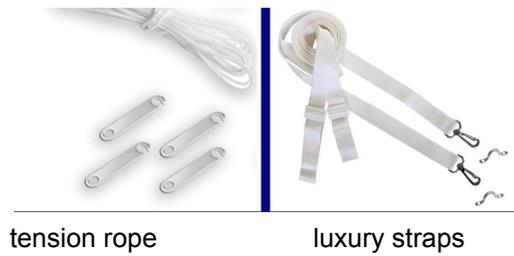

INSTALLING THE BIMINITOP ON THE BOAT

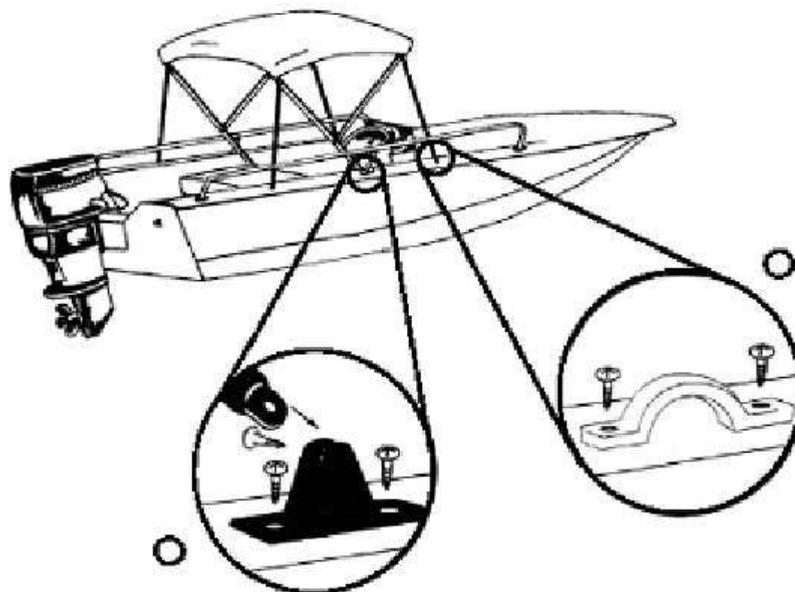

Step 1:

The Biminitop is now ready to install on the boat. This is easiest with two persons. One to hold the top in place, while the other sets the mark where the anchorage points should be on the boat.

Step 2:

Check carefully whether the fixings are exactly opposite each other. If not exactly sitting opposite each other may damage the top, be unstable in use, or skewed eyes.

Step 3

Use a sharp drill bit with a diameter of 3 - 3.5 mm depending on the thickness of the polyester, thicker polyester, predrill with 3.5 mm. When in doubt, ask your dealer / importer. When drilling in polyester, the hole must be galvanized to prevent tearing of the polyester. The deck fittings must be secured with the screws that are included. If you mount the screws, we advise you to do so with a little bit of silicone sealant.

Step 4:

Mount the Bimini-Top to the just mounted brackets. Raise the Top in the desired unfolded position and mark the position of the deck eyes for the tension straps and the mounting plates for any additional support posts ordered. The lashing straps should be at an angle to the boat have from 45° to a maximum of 60°.

Step 5:

Mark the location of the deck brackets for the tension straps and mounting plates if you have support posts on the boat. Again, make sure the brackets and plates are exactly opposite each other and then drill the holes. Countersink the hole of the screw, if drilled in polyester and add a little silicone sealant to the screw. Do you have support posts at the back and you can also shorten them by sawing them off if that suits you better. You can also play a bit by sliding the middle part. (This is the connection of the support posts and your Bimini-Top)

Step 6:

Attach the lashing strap hook to the eye bracket and adjust the lashing strap up to it is taut.

Important: Make sure all screw, hook, and strap connections are tight. Regularly check that all connections are tight, screws and jacks.

If you have any questions, you can reach us via the chat at the bottom right of our website.

With kind regardst,

The team of:

Mijnnaaiatelier.nl / Saliseal

